

Compact actuator with damper blade, for the control or shut-off of volumetric air flows in air-conditioning plants, particularly where space is limited

- · Pipe diameter 125 mm
- · Nominal voltage AC 230 V
- · Control Open-close, 3-point
- Fit in round air ducts in accordance with DIN EN 1506



| | ** | |
|-----------------|--|--------------------------------------|
| Technical data | | |
| Electrical data | Nominal voltage | AC 230 V |
| | Nominal voltage frequency | 50/60 Hz |
| | Nominal voltage range | AC 85265 V |
| | Power consumption in operation | 1.5 W |
| | Power consumption in rest position | 1 W |
| | Power consumption for wire sizing | 3 VA |
| | Connection supply / control | Cable 1 m, 3 x 0.75 mm ² |
| | Parallel operation | Yes (note the performance data) |
| Functional data | Pipe diameter | 125 mm |
| | Manual override | with magnet |
| | Angle of rotation | 70° |
| | Running time motor | 58 s / 70° |
| | Sound power level motor | 35 dB(A) |
| | Airtightness | Class 2 (DIN EN 1751) |
| | Resistance coefficient ζ | 0.3 (in open position) |
| | Static differential pressure | Max. 1000 Pa via the damper (4" w.g) |
| Safety | Flame class | Damper blade UL 94 HB |
| | | Actuator UL 94 V-0 |
| | Fire behaviour group | Damper blade RF3 (CH) |
| | | Actuator RF2 (CH) |
| | Fire load | 4.6 MJ |
| | Protection class IEC/EN | II Protective insulated |
| | Degree of protection IEC/EN | IP54 |
| | EMC | CE according to 2014/30/EU |
| | Low voltage directive | CE according to 2014/35/EU |
| | Certification IEC/EN | IEC/EN 60730-1 and IEC/EN 60730-2-14 |
| | Mode of operation | Type 1 |
| | Rated impulse voltage supply / control | 2.5 kV |
| | Control pollution degree | 3 |
| | Ambient temperature | -3050°C |
| | Non-operating temperature | -4080°C |
| | Ambient humidity | 95% r.h., non-condensing |
| | Maintenance | Maintenance-free |
| Weight | Weight | 0.29 kg |
| | | |

Safety notes



- The device must not be used outside the specified field of application, especially not in aircraft or in any other airborne means of transport.
- The device must not be used for safety applications, e.g. fire protection.
- As a rule, the device is resistant to a multitude of organic solvents and alkaline agents. Unusual ambient conditions will, however, require special clarifications. In particular, the damper may not be used in environments where it may be exposed to chemically aggressive substances, e.g. laboratory exhaust air or fume hood exhaust air (laboratory exhaust systems/fume hoods).



Safety notes

- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation. The CM..D.. (Art. 70949-00001) installation instructions must be observed in order to ensure smooth operation.
- Adherence to the pipe geometry specified in accordance with DIN EN 1506 must be ensured (no damage).
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed
 of as household refuse. All locally valid regulations and requirements must be
 observed.

Product features

Fields of application

- Air flow through the building shell
- Air distribution / comfort ventilation
- Air outlets
- Zone controls
- Devices with outside air: Facade equipment / fan coils / fan-powered boxes / cabin units etc..
- Exhaust air systems, e.g. sanitary facilities

Manual override

Manual override with magnet possible (gear disengagement as long as the magnet adheres to the magnet symbol). The Z-MA magnet for the gear disengagement is enclosed.

High functional reliability

The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.


Flow noise

The noise caused by the flow of air in the pipe section with a built-in air damper and passed along inside it. Below the sound power levels listed are A-evaluated in the duct as a function of dimension, volumetric flow and pressure loss.



Sound power level LWA

Sound power level with A-evaluation, including correction of the outlet reflection LWA

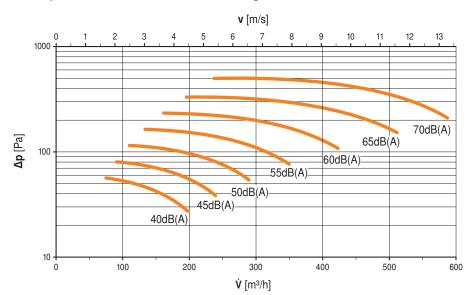

 $\begin{array}{c} \text{Volumetric flow } \dot{V} \\ \text{Air velocity } v \\ \text{Pressure loss } \Delta p \end{array}$



Accessories

Mechanical accessoriesDescriptionTypeMagnet disengagementZ-MA

Electrical installation




Notes

- · Caution: Power supply voltage!
- Parallel connection of other actuators possible. Observe the performance data.


Wiring diagrams

AC 230 V, open-close



Cable colours: 1 = blue


2 = brown 3 = white




Installation notes

Pipelines

- Belimo recommends the use of round folded spiral-seam pipelines (spiro pipes) with 0.5 mm metal gauge (in accordance with DIN EN 1506) and with the fold on the outside of the pipe. Folded spiral-seam pipes are usually rounder than longitudinally-welded pipes. Leakages can be reduced as a result. The interior side of the folded spiral-seam pipes is smooth. The welding seam can inhibit the function of the damper blade with longitudinally welded pipes. If longitudinally welded pipes nevertheless need to be used, Belimo cannot guarantee the proper functioning of the actuator.
- No protruding longitudinal fold facing inward permitted
- Use only galvanised sheet steel or chrome steel. Installation in plastic pipelines is not recommended.
- Do not place the fastening holes of the actuator across from the welding seam. The damper blade could become damaged after a short time. The fastening holes should be drilled approximately 40 mm away from the welding seam. This will reduce the damper noise and damage to the damper blade to a minimum.

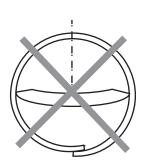

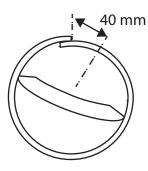




Installation notes

Installation situation

For the pipe connection, take into account the pipe collar size (insertion depth L1) before the actuator fixing and after the damper blade.

Observe correct direction of air flow: \rightarrow Actuator \rightarrow Damper blade \rightarrow Special installation shapes require verification.

The strain relief of the cable is guaranteed in the CM.. actuator.

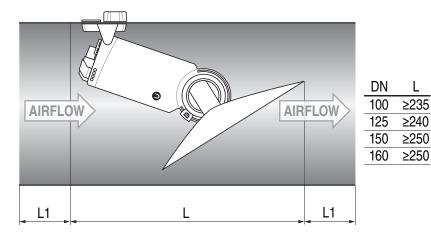

It requires the following alignment of the bore holes

