


Characterised control valve with thermal energy meter, sensor-operated flow or power control, power and energy monitoring function, 2-way, internal and external thread, PN 25

- Nominal voltage AC/DC 24 V
- Control modulating, communicative, hybrid
- For closed cold and warm water systems
- For modulating control of air-handling and heating systems on the water side
- Ethernet 10/100 Mbit/s, TCP/IP, integrated web server
- Communication via BACnet, Modbus, Belimo MP-Bus or conventional control
- PoE (Power over Ethernet) Power supply possible
- Conversion of sensor signals
- Glycol monitoring
- Power control, flow control, position control and differential pressure control

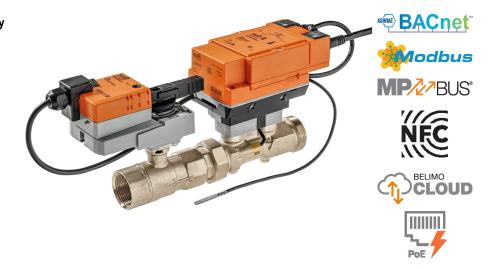

Type Overview										
Туре	DN	Rp ["]	G ["]	V'nom [l/s]	V'nom [l/min]	V'nom [m³/h]	Kvs theor. [m³/h]	PN		
EV015R2+BAC	15	1/2	3/4	0.42	25	1.5	3.2	25		
EV020R2+BAC	20	3/4	1	0.69	41.7	2.5	5.3	25		
EV025R2+BAC	25	1	1 1/4	0.97	58.3	3.5	8.8	25		
EV032R2+BAC	32	1 1/4	1 1/2	1.67	100	6	14.1	25		
EV040R2+BAC	40	1 1/2	2	2.78	166.7	10	19.2	25		
EV050R2+BAC	50	2	2 1/2	4.17	250	15	30.4	25		

Kvs theor.: theoretical Kvs value for pressure drop calculation


# Structure

# Components

The Belimo Energy Valve consists of a characterised control valve, an actuator and a thermal energy meter with a logic and a sensor module.

The logic module provides the power supply, the communication interface and the NFC connection of the energy meter. All relevant data are measured and recorded in the sensor module.

This modular design of the energy meter means that the logic module can remain in the system if the sensor module is replaced.

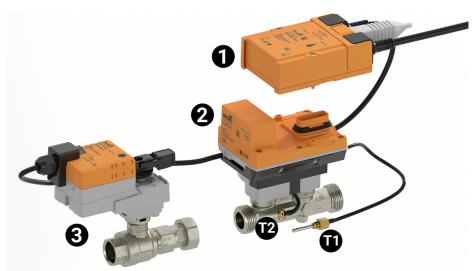

External temperature sensor T1 Integrated temperature sensor T2 Logic module 1 Sensor module 2

Characterised control valve with actuator 3



**Technical data** 

Electrical data	Nominal voltage	AC/DC 24 V					
	Nominal voltage frequency	50/60 Hz					
	Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V					
	Power consumption in operation	4 W (DN 15, 20, 25)					
	·	5 W (DN 32, 40, 50)					
	Power consumption in rest position	3.7 W (DN 15, 20, 25)					
		3.9 W (DN 32, 40, 50)					
	Power consumption for wire sizing	6.5 VA (DN 15, 20, 25) 7.5 VA (DN 32, 40, 50)					
	Connection supply / control	Cable 1 m, 6x 0.75 mm²					
	Connection Ethernet	RJ45 socket					
	Power over Ethernet PoE	DC 3757 V					
		11 W (PD13W)					
		IEEE 802.3af/at, Type 1, Class 3					
	Conductors, cables	AC/DC 24 V, cable length <100 m, no shielding					
		or twisting required					
		Shielded cables are recommended for supply via PoE					
Data bus communication	Communicative control	BACnet/IP, BACnet MS/TP					
		Modbus TCP, Modbus RTU					
		MP-Bus Cloud					
Data bus communication  Functional data	Number of nodes	BACnet / Modbus see interface description					
	Number of flowes	MP-Bus max. 8					
Functional data	Operating range Y	210 V					
	Input impedance	100 kΩ					
	Operating range Y variable Position feedback U	0.510 V					
		210 V					
	Position feedback U note Position feedback U variable	Max. 1 mA 010 V					
	Position Teedback O variable	0.510 V 0.510 V					
	Sound power level Motor	35 dB(A) (DN 15, 20, 25, 32, 40)					
	Sound power level motor	45 dB(A) (DN 50)					
	V'max adjustable	25100% of V'nom					
	Control accuracy	±5% (of 25100% V'nom)					
	Control accuracy note	±10% (of 25100% V'nom) @ Glycol 060%					
		vol.					
	Min. controllable flow	1% of V'nom					
	Parametrisation	via NFC, Belimo Assistant App					
		via integrated web server					
	Fluid	Cold and warm water, water with glycol up to max. 60% vol.					
	Fluid temperature	-10120°C [14248°F]					
	Close-off pressure Δps	1400 kPa					
	Differential pressure Δpmax	350kPa					
	Differential pressure note	200 kPa for low-noise operation					
	Flow characteristic	equal percentage (VDI/VDE 2173), optimised in the opening range					
	Flow characteristic note	switchable to linear (VDI/VDE 2173)					
	Leakage rate	air-bubble tight, leakage rate A (EN 12266-1)					



Technical data

Functional data	Pipe connection	Internal and external thread				
	Installation orientation	upright to horizontal (in relation to the stem)				
	Servicing	maintenance-free				
	Manual override	with push-button, can be locked				
Moscuring data	Measured values	Flow				
Measuring data	wedsured values	Fluid temperature supply				
		Fluid temperature return				
	Temperature sensor	Pt1000 - EN 60751, 2-wire technology,				
		inseparably connected				
		Cable length external sensor T1: 3 m				
		T2 integrated in flow sensor				
Temperature measurement	Measuring accuracy absolute temperature	± 0.35°C @ 10°C (Pt1000 EN60751 Class B)				
		± 0.6°C @ 60°C (Pt1000 EN60751 Class B)				
	Measuring accuracy temperature difference	±0.22 K @ ΔT = 10 K				
		±0.32 K @ ΔT = 20 K				
Flow measurement	Measuring principle	Ultrasonic volumetric flow measurement				
	Measuring accuracy flow	±2% (of 20100% V'nom) @ 20°C / glycol 0%				
		vol.				
	Measuring accuracy flow note	EN 1434 Class 2 @ 15120°C				
		±5% (of 20100% V'nom) @ glycol 060% vol.				
	Min. flow measurement	0.5% of V'nom				
Glycol monitoring	Measurement display glycol	060% or >60%				
	Measuring accuracy glycolmonitoring	±4% (060%)				
Safety data	Protection class IEC/EN	III, Protective Extra-Low Voltage (PELV)				
Surety data	Degree of protection IEC/EN	IP54				
	Degree of protection IEE/EN	Logic module: IP54 (with grommet A-22PEM-				
		A04)				
		Sensor module: IP65				
	Measuring Instruments Directive	CE according to 2014/32/EU				
	Pressure equipment directive	CE according to 2014/68/EU				
	EMC	CE according to 2014/30/EU				
	Certification IEC/EN	IEC/EN 60730-1:11 and IEC/EN 60730-2-15:10				
	Quality Standard	ISO 9001				
	Type of action	Type 1				
	Rated impulse voltage supply / control	0.8 kV				
	Pollution degree	3				
	Ambient humidity	Max. 95% RH, non-condensing				
	Ambient temperature Storage temperature	-3050°C [-22122°F] -4080°C [-40176°F]				
	Storage temperature	-4080 C [-40170 F]				
Materials	Valve body	Brass				
	Flow measuring pipe	Brass body nickel-plated				
	Closing element	Stainless steel				
	Spindle	Stainless steel				
	Spindle seal	EPDM O-ring				
	Immersion sleeve	Stainless steel				



## Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the device and that it is ensured that the ambient conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

#### **Product features**

#### Operating mode

The HVAC performance device is comprised of four components: characterised control valve (CCV), measuring pipe with flow sensor, temperature sensors and the actuator itself. The adjusted maximum flow (V'max) is assigned to the maximum control signal DDC (typically 10 V / 100%). Alternatively, the control signal DDC can be assigned to the valve opening angle or to the power required on the heat exchanger (see power control). The HVAC performance device can be controlled via communicative or analogue signals. The fluid is detected by the sensor in the measuring pipe and is applied as the flow value. The measured value is balanced with the setpoint. The actuator corrects the deviation by changing the valve position. The angle of rotation  $\alpha$  varies according to the differential pressure through the control element (see flow curves).

## Calibration certificate

A calibration certificate is available in the Belimo Cloud for each thermal energy meter. If required, this can be downloaded as a PDF with the Belimo Assistant App or via the Belimo Cloud frontend.

#### Power calculation

The thermal energy meter calculates the current thermal power based on the current flow rate and the measured temperature difference.

# **Energy consumption**

The energy consumption data can be read out as follows:

- Bus
- Cloud API
- Belimo Cloud Account of the device owner
- Belimo Assistant App
- Integrated web server

# PoE (Power over Ethernet)

If necessary, the thermal energy meter can be supplied with power via the Ethernet cable. This function can be enabled via the Belimo Assistant App.

DC 24 V (max. 8 W) is available at wires 1 and 2 for power supply of external devices (e.g. actuator or active sensor).

Caution: PoE may only be enabled if an external device is connected to wires 1 and 2 or if wires 1 and 2 are insulated!


#### Spare parts

Sensor module of the thermal energy meter consisting of:

- 1 x sensor module including integrated temperature sensor T2 and external temperature sensor T1




#### Flow rate curves

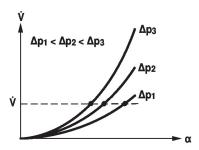

## Transmission behaviour HE

Heat exchanger transmission behaviour

Depending on the construction, temperature spread, fluid characteristics and hydronic circuit, the power Q is not proportional to the water volumetric flow V' (Curve 1). With the classical type of temperature control, an attempt is made to maintain the control signal Y proportional to the power Q (Curve 2). This is achieved by means of an equal-percentage flow characteristic (Curve 3).

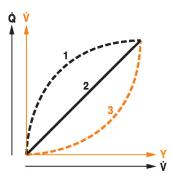

## **Power control**

Alternatively, the control signal DDC can be assigned to the output power required at the heat exchanger.

Depending on the water temperature and air conditions, the Energy Valve ensures the amount of water V' required to achieve the desired power.

Maximum controllable power on heat exchanger in power control mode:

DN 15	90 kW					
DN 20	150 kW					
DN 25	210 kW					
DN 32	350 kW					
DN 40	590 kW					
DN 50	880 kW					

## **Control characteristics**

The specially configured control parameters in connection with the precise velocity sensor ensure a stable quality of control. They are, however, not suitable for rapid control processes, i.e. for domestic water control.




#### Power control

Q'nom is the maximum possible power output on the heat exchanger.

Q'max is the maximum power output on the heat exchanger which has been set with the highest control signal DDC. Q'max can be set between 1% and 100% of Q'nom.


Q'min 0% (non-variable).

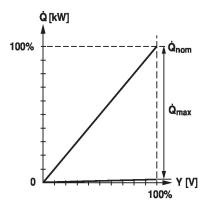

## Flow control

V'nom is the maximum possible flow.

V'max is the maximum flow rate which has been set with the highest control signal DDC. V'max can be set between 25% and 100% of V'nom.

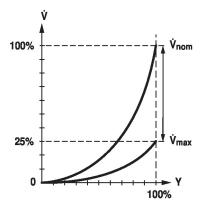

## Position control

In this setting, the control signal is assigned to the opening angle of the valve (e.g. Y = 10 V  $\alpha$  = 90°).

The result is a pressure-dependent operation similar to that of a conventional valve.

Running time of the motor in this mode is 90 s for 90°.




# Differential pressure control

In addition to power control, flow control and position control, the Energy Valve can be used to control the differential pressure between two measuring points of a differential pressure sensor (not included).

The following differential pressure sensors can be used:

- Belimo differential pressure sensor 22WDP-11..

The specifications listed in the sensor data sheet must be observed.

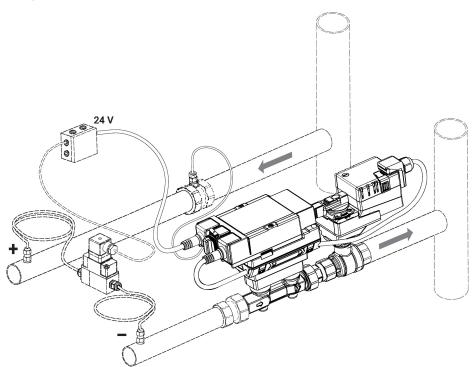

Energy Valve with accessories Differential pressure sensor 22WDP-11.. Pipe connector EXT-EF-..F T-piece with thermowell A-22PE-A0..

In the operating mode differential pressure control, no external setpoint is given to the Energy Valve. The setpoint is set in the device. The setting is made via web server, Belimo Assistant App, communicative interface (BACnet, Modbus, MP-Bus) or via the Belimo Cloud. The possible setting value depends on the selected differential pressure sensor and is between 10 and 400 kPa.

Further information on the differential pressure control mode can be found in the document "Differential pressure control with the Belimo Energy Valve™".



### **Creep flow suppression**


Given the very low flow speed in the opening point, this can no longer be measured by the sensor within the required tolerance. This range is overridden electronically.

### Opening valve

The valve remains closed until the flow required by the control signal DDC corresponds to 1% of V'nom. The control along the flow characteristic is active after this value has been exceeded.

# Closing valve

The control along the flow characteristic is active up to the required flow rate of 1% of V'nom. Once the level falls below this value, the flow rate is maintained at 1% of V'nom. If the level falls below the flow rate of 0.5% of V'nom required by the control signal DDC, then the valve will close.

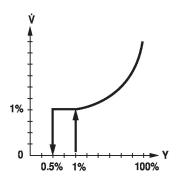

## Configurable actuators

The factory settings cover the most common applications.

The parametrisation can be carried out through the integrated web server (RJ45 connection to the web browser) or by communicative means.

Additional information regarding the integrated web server can be found in the separate documentation.

The Belimo Assistant App is required for parametrisation via Near Field Communication (NFC) and simplifies commissioning. Moreover, it provides a variety of diagnostic options.

## Communication

The parametrisation can be carried out through the integrated web server (RJ45 connection to the web browser) or by communicative means.

Additional information regarding the integrated web server can be found in the separate documentation.

#### "Peer to Peer" connection

https://169.254.1.1

The Notebook must be set to "DHCP".


Make sure that only one network connection is active.

## Standard IP address:

https://192.168.0.10 Static IP address

# Password (read-only):

User name: «guest» Password: «guest»

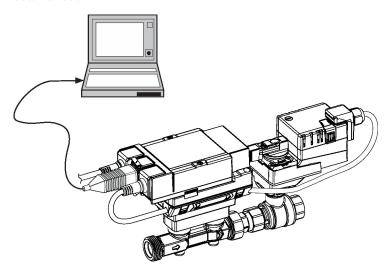

## **Control signal inversion**

This can be inverted in cases of control with an analogue control signal DDC. The inversion causes the reversal of the standard behaviour, i.e. at a control signal DDC of 0%, regulation is to V'max or Q'max, and the valve is closed at a control signal DDC of 100%.



#### Hydronic balancing

Via the integrated web server, the maximum flow rate (equivalent to 100% requirement) can be adjusted on the device itself, simply and reliably, in a few steps. If the device is integrated in the management system, then the balancing can be handled directly by the management system.

## Delta-T manager

If a heating or cooling coil is operated with a flow rate that is too high and thus with a differential temperature that is too low, this will not result in an increased power output.

Low differential temperatures result in heat generators or chillers providing energy at a lower efficiency. At the same time, too much water is circulated by the pumps, which unnecessarily increases energy consumption.


With the aid of the Energy Valve, it is easy to identify operation that deviates from the design case and to locate energy that is being used inefficiently.

The integrated delta T manager offers the user the possibility to define a delta T limit value. Falling below this value is automatically avoided by the Energy Valve by limiting the flow rate.

The delta T manager can be activated in the operating modes power control, flow control and position control. The delta T manager is not available in the differential pressure control operating mode.

Power output of the heating or cooling registers 1 Diff. temperature between supply and return

Loss zone (heating or cooling register saturation) 3 Adjustable minimum differential temperature

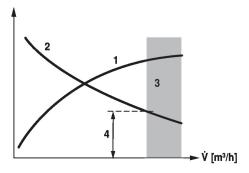

# Combination analogue - communicative (hybrid mode)

With conventional control by means of an analogue control signal DDC, the integrated web server, BACnet, Modbus or MP-Bus can be used for the communicative position feedback.

Power and energy monitoring function

The HVAC performance device is equipped with two temperature sensors. A sensor (T2) is already installed at the thermal energy meter and the second sensor (T1) must be installed on-site on the other side of the water circuit. The two sensors are enclosed with the system already wired. The sensors are used to record the fluid temperature of the supply and return lines of the consumer (heating/cooling coil). As the water quantity is also known, thanks to the flow measurement integrated in the system, the power released from the consumer can be calculated. Furthermore, the heating/cooling energy is also determined automatically by means of the evaluation of the power over time.

The current data, e.g. temperatures, volumetric flow volumes, exchanger energy consumption etc. can be recorded and accessed at any time by means of web browsers or communication.

#### Data recording

The recorded data (integrated data recording for 13 months) can be used for the optimisation of the overall system and for the determination of the performance of the consumer (heating/cooling coil).

Download csv files through web browser.

## **Belimo Cloud**

Additional services are available if the Energy Valve is connected to the Belimo Cloud: for instance, several devices may be managed via Internet. Also, Belimo experts may help analyse the delta-T behaviour or provide written reports about the Energy Valve performance. Under certain conditions, the product warranty according to the applicable Terms and Conditions of Sale may be prolonged. The "Terms of Use for Belimo Cloud Services" in their currently valid version apply to the use of Belimo Cloud services. Further details may be found under [www.belimo.com/ext-warranty]



# **Product features**

Glycol monitoring

Glycol monitoring measures the actual glycol content, which is necessary for safe operation and optimised heat exchange.

Error readout with analogue position

feedback

If the sensor cannot measure the flow due to a sensor error, this is indicated by 0.3 V at the position feedback U. This is only the case if the analogue position feedback U is set to flow and the lower value of the signal range is 0.5 V or more.

Manual override

Manual override with push-button possible (the gear train is disengaged for as long as the button is pressed or remains locked).

**High functional safety** 

The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.

# Parts included

Description	Туре
Grommet for RJ connection module with clamp	A-22PEM-A04
Thermowell Stainless steel, 50 mm, G 1/4", SW17	A-22PE-A07
Insulation shell for EPIV / Belimo Energy Valve™ DN 1525	Z-INSH15
Insulation shell for EPIV / Belimo Energy Valve™ DN 3250	Z-INSH32
Insulation shall not included in Asia Pacific	

## Accessories

Replacement sensor modules	Description	Туре		
	Sensor module thermal energy meter DN 15	R-22PE-0UC		
	Sensor module thermal energy meter DN 20	R-22PE-0UD R-22PE-0UE R-22PE-0UF R-22PE-0UG R-22PE-0UH <b>Type</b>		
	Sensor module thermal energy meter DN 25			
	Sensor module thermal energy meter DN 32			
	Sensor module thermal energy meter DN 40			
	Sensor module thermal energy meter DN 50			
Tools	Description			
	Belimo Assistant App, Smartphone app for easy commissioning,	Belimo Assistant		
	parametrising and maintenance	Арр		
	Converter Bluetooth / NFC	ZIP-BT-NFC		
Gateways	Description	Туре		
	Converter M-Bus	G-22PEM-A01		
Mechanical accessories	Description	Туре		
	T-piece with thermowell DN 15	A-22PE-A01		
	T-piece with thermowell DN 20	A-22PE-A02		
	T-piece with thermowell DN 25	A-22PE-A03		
	T-piece with thermowell DN 32	A-22PE-A04		
	T-piece with thermowell DN 40	A-22PE-A05		
	T-piece with thermowell DN 50	A-22PE-A06		
	Thermowell Stainless steel, 80 mm, G 1/2", SW27	A-22PE-A08		
	Pipe connector DN 15 Rp 1/2", G_1 3/4"	EXT-EF-15F		
	Pipe connector DN 20 Rp 3/4", G_1 1"	EXT-EF-20F		
	Pipe connector DN 25 Rp 1", G_1 1 1/4"	EXT-EF-25F		
	Pipe connector DN 32 Rp 1 1/4", G_1 1 1/2"	EXT-EF-32F		
	Pipe connector DN 40 Rp 1 1/2", G_1 2"	EXT-EF-40F		
	Pipe connector DN 50 Rp 2", G_1 2 1/2"	EXT-EF-50F		
	Valve neck extension for ball valve DN 1550	ZR-EXT-01		
	Pipe connector for ball valve with internal thread DN 15 Rp 1/2"	ZR2315		
	Pipe connector for ball valve with internal thread DN 20 Rp 3/4"	ZR2320		
	Pipe connector for ball valve with internal thread DN 25 Rp 1"	ZR2325		
	Pipe connector for ball valve with internal thread DN 32 Rp 1 1/4"	ZR2332		
	Pipe connector for ball valve with internal thread DN 40 Rp 1 1/2"	ZR2340		
	•			



## **Accessories**

Description	Туре	
Pipe connector for ball valve with internal thread DN 50 Rp 2"	ZR2350	

## **Electrical installation**



Supply from isolating transformer.

Parallel connection of other actuators possible. Observe the performance data.

The wiring of the line for BACnet MS/TP / Modbus RTU is to be carried out in accordance with applicable RS-485 regulations.

Modbus / BACnet: Supply and communication are not galvanically isolated. Connect earth signal of the devices with one another.

Sensor connection: An additional sensor can optionally be connected to the thermal energy meter. This can be a passive resistance sensor Pt1000, Ni1000, NTC10k (10k2), an active sensor with output DC 0...10 V or a switching contact. Thus the analogue signal of the sensor can be easily digitised with the thermal energy meter and transferred to the corresponding bus system.

Analogue output: An analogue output (wire 5) is available on the thermal energy meter. It can be selected as DC 0...10 V, DC 0.5...10 V or DC 2...10 V. For example, the flow rate or the temperature of the temperature sensor T1/T2 can be output as an analogue value.

#### **Functions**

C1 = D - = A (wire 6)

C2 = D + = B (wire 7)

# Wire colours:

1 = black


2 = red


3 = white

5 = orange

6 = pink

7 = grey

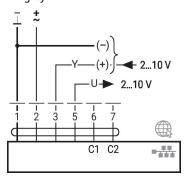


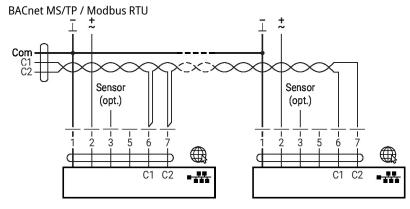




# **Electrical installation**


## BACnet/IP / Modbus TCP

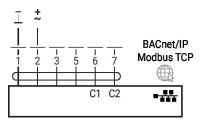

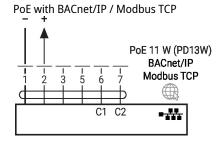




Connection of a notebook for parametrisation and manual control via RJ45.





Optional connection via RJ45 (direct connection to notebook / connection via Intranet or Internet) for access to the integrated web server

Connection with passive sensor

Connection with switching contact Connection with active sensor

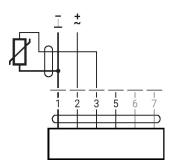

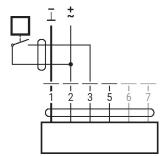


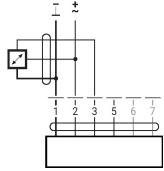

# **Functions**

# Functions with specific parameters (parametrisation necessary)


Override control and limiting with AC 24 V with relay contacts

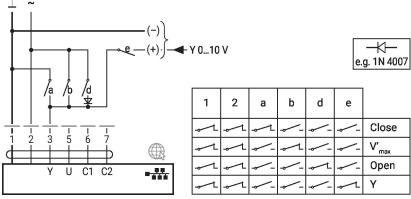



# Functions with specific parameters (parametrisation necessary)


Override control and limiting with DC 24 V with relay contacts (with conventional control or hybrid mode)

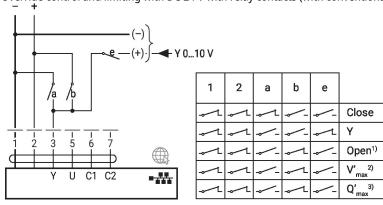

- 1) Position control
- 2) Flow control
- 3) Power control


BACnet MS/TP / Modbus RTU with analogue setpoint (hybrid mode)

BACnet/IP / Modbus TCP with analogue setpoint (hybrid mode)

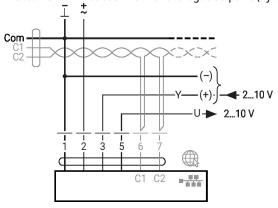



MP-Bus, supply via 3-wire connection


MP-Bus via 2-wire connection, local power supply

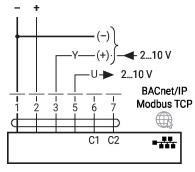


MP-Bus with analogue setpoint (hybrid mode)

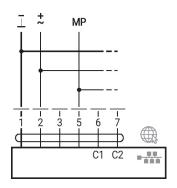


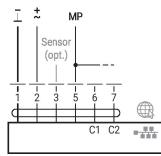

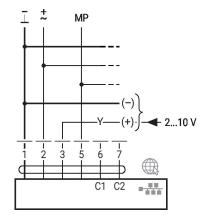

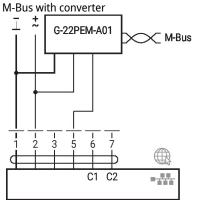

M-Bus parallel Modbus TCP or BACnet/IP with PoE

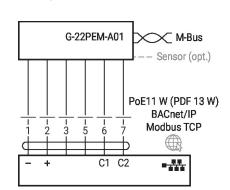






# **Functions**

# Functions with specific parameters (parametrisation necessary)

M-Bus via Converter M-Bus

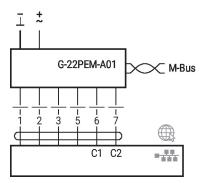


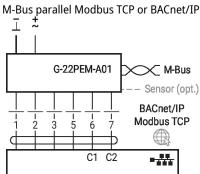

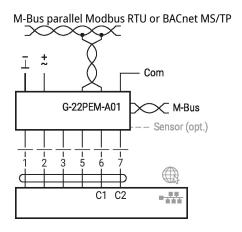


# Operating mode differential pressure control

Connection of differential pressure sensor 22WDP-11.. (sensor not included)

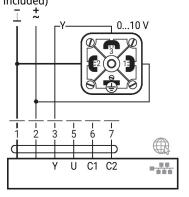



# Operating controls and indicators

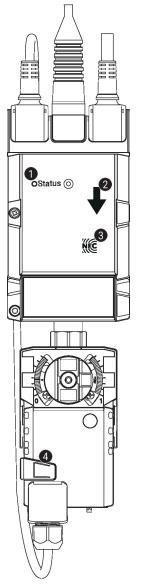

1 LED display green

On: Device starting up Flashing: In operation (Power ok)

Off: No power

2 Flow direction

3 NFC interface


4 Manual override button

Press button: Gear train disengages, motor stops, manual override possible
Release button: Gear train engages, standard mode. Device performs synchronisation

# **Installation notes**

Permissible installation orientation

The ball valve can be installed upright to horizontal. The ball valve may not be installed in a hanging position, i.e. with the spindle pointing downwards.

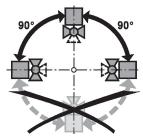

Installation location in return

Installation in the return is recommended.



#### Water quality requirements

The water quality requirements specified in VDI 2035 must be adhered to.

Belimo valves are regulating devices. For the valves to function correctly in the long term, they must be kept free from particle debris (e.g. welding beads during installation work). The installation of a suitable strainer is recommended.

#### Servicing

Ball valves, rotary actuators and sensors are maintenance-free.

Before any service work on the control element is carried out, it is essential to isolate the rotary actuator from the power supply (by unplugging the electrical cable if necessary). Any pumps in the part of the piping system concerned must also be switched off and the appropriate slide valves closed (allow all components to cool down first if necessary and always reduce the system pressure to ambient pressure level).

The system must not be returned to service until the ball valve and the rotary actuator have been correctly reassembled in accordance with the instructions and the pipeline has been refilled by professionally trained personnel.

Flow direction

The direction of flow, specified by an arrow on the housing, is to be complied with, since otherwise the flow rate will be measured incorrectly.

Cleaning of pipes


Before installing the thermal energy meter, the circuit must be thoroughly rinsed to remove impurities.

**Prevention of stresses** 

The thermal energy meter must not be subjected to excessive stress caused by pipes or fittings.

Inlet section

In order to achieve the specified measuring accuracy, a flow-calming section or inflow section in the direction of the flow is to be provided upstream from the flow sensor. Its dimensions should be at least 5x DN.

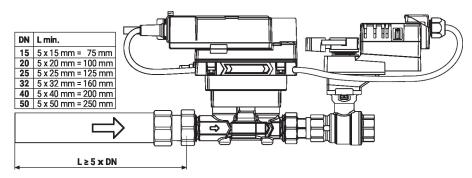



## **Installation notes**


# Mounting of immersion sleeve and temperature sensor

The valve is equipped with two fully-wired temperature sensors.

- T2: This sensor is installed in the thermal energy meter.
- T1: This sensor has to be installed on site ahead of the consumer (valve in the return line; recommended) or after the consumer (valve in the supply line).

#### Note

The cables between valve unit and temperature sensors may not be shortened or extended.

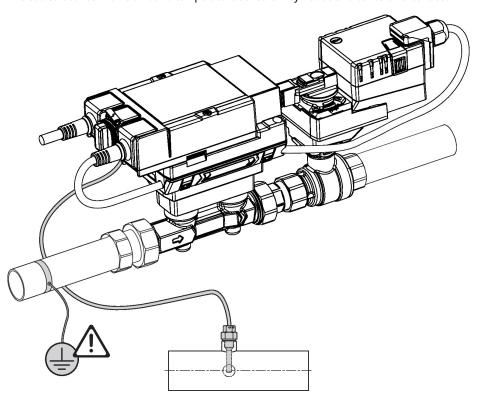

Split installation

The valve-actuator combination may be mounted separately from the flow sensor. The direction of flow of both components must be observed.

# **General notes**

# Minimum differential pressure (pressure drop)

The minimum required differential pressure (pressure drop through the valve) for achieving the desired volumetric flow V'max can be calculated with the aid of the theoretical Kvs value (see type overview) and the below-mentioned formula. The calculated value is dependent on the required maximum volumetric flow V'max. Higher differential pressures are compensated for automatically by the valve.

Formula

$$\Delta p_{min} = 100 \text{ x} \left( \frac{\text{V'}_{max}}{\text{K}_{vs} \text{ theor.}} \right)^2 \quad \begin{bmatrix} \Delta p_{min} \text{; kPA} \\ \text{V'}_{max} \text{; m}^3 \text{/h} \\ \text{K}_{vs} \text{ theor.; m}^3 \text{/h} \end{bmatrix}$$

Example (DN 25 with the desired maximum flow rate = 50% V'nom)

EV025R2+BAC

$$\Delta p_{min} = 100 \text{ x} \left( \frac{V'_{max}}{K_{vs} \text{ theor.}} \right)^2 = 100 \text{ x} \left( \frac{1.75 \text{ m}^3/\text{h}}{8.8 \text{ m}^3/\text{h}} \right)^2 = 4 \text{ kPa}$$



# **General notes**


#### Behaviour in case of sensor failure


In case of a flow sensor error, the Energy Valve will switch from either power or flow control to position control (Delta-T manger will be deactivated).

Once the error disappears, the Energy Valve will switch back to the normal control setting (Delta-T manager activated)

# **Dimensions**

# **Dimensional drawings**

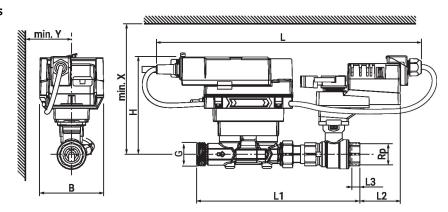

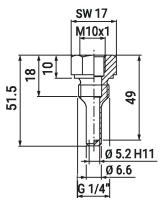

Туре	DN	Rp	G	L	L1	L2	L3	В	Н	X	Y	മ
		["]	["]	[mm]	/ kg \							
EV015R2+BAC	15	1/2	3/4	362	195	62	13	90	136	206	80	2.2
EV020R2+BAC	20	3/4	1	374	230	57	14	90	137	207	80	2.4
EV025R2+BAC	25	1	1 1/4	381	246	51	16	90	140	210	80	2.8
EV032R2+BAC	32	1 1/4	1 1/2	398	267	50	19	90	143	213	80	3.5
EV040R2+BAC	40	1 1/2	2	404	280	45	19	90	147	217	80	4.2
EV050R2+BAC	50	2	2 1/2	421	294	49	22	90	152	222	80	5.1

# **Further documentation**

- Data sheet thermal energy meter
- Overview MP Cooperation Partners
- Tool connections
- General notes for project planning
- Instruction Webserver
- Description Data-Pool Values
- BACnet Interface description
- Modbus Interface description
- Introduction to MP-Bus Technology
- Installation instructions for actuators and/or ball valves